

DESCRIPTION

THE PURPOSE OF THE E.F.E. HEATER IS TO AID WITH VAPORIZATION OF FUEL IN COLD CONDITIONS AND REDUCE EXHAUST EMISSIONS BY RUNNING A FEW MINUTES TO ALLOW FOR LEANER CHOKE CALIBRATION.

◆ LOCATION


E.F.E. HEATER IS LOCATED BETWEEN THE THROTTLE BODY OF THE CARBURETOR AND THE INTAKE MANIFOLD.

SYMPTOMS OF FAILURE

POOR DRIVEABILITY AND FUEL ECONOMY AND/OR FAILURE TO TURN OFF AFTER REACHING OPERATING TEMPERATURE.

◆ RECOMMENDED SERVICE

REPLACE WHEN GASKET BECOMES NON-FUNCTIONAL

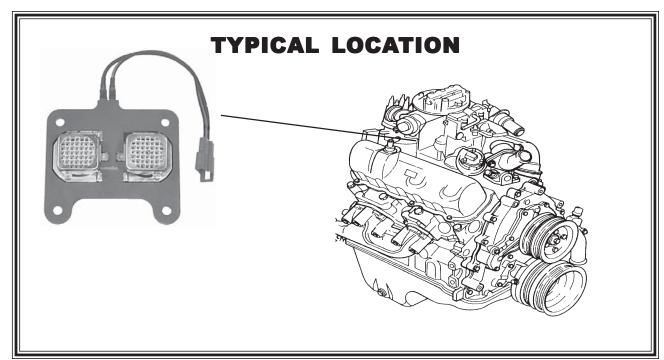



GINE							
GINE	VEHICLE	FUEL			WALKER		
ISP.	MODEL	SYSTEM	CONNECTOR	O.E.M. NO.	PART NO.		
GENERAL MOTORS							
ER							
.6L A	II Models			10159600, 14032308	G1660		
.8L A	II Models			14018761	G1659		
.0L A	II Models	(TBI)		14072739, 14072740	G1656		
.8L A	II Models	(Carb)		10174801, 10174802, 10174803, 14033194,	G1308		
				14059353, 14059380			
.0L A	II Models	2BBL	Gray	24501659, 24501660, 25515853, 25516908	G1651		
.0L A	II Models	2BBL	Black	24501661, 25526373	G1654		
.8L T	urbo All	4BBL		24500047, 25507722, 25536252	G1670		
.8L A	II Models	2BBL	Gray	24501659, 25515853	G1651		
.8L A	II Models	2BBL	Black	24501661, 25526373	G1654		
.1L A	II Models			25518521, 25522511*	G1668		
	ERAI ER 6L A 8L A 0L A 0L A 0L A 0L A 0L A 8L T 8L A 8L A	ERAL MOTO ER 6L All Models 8L All Models 0L All Models 0ER 8L All Models 0L All Models 0L All Models 0L All Models 8L Turbo All 8L All Models 8L All Models	ERAL MOTORS ER 6L All Models 8L All Models 0L All Models (TBI) ER 8L All Models (Carb) 0L All Models (BBL 0L All Models 2BBL 0L All Models 2BBL 8L Turbo All 4BBL 8L All Models 2BBL 8L All Models 2BBL	ERAL MOTORS BER 6L All Models 8L All Models 0L All Models (TBI) DER 8L All Models (Carb) 0L All Models 2BBL Gray 0L All Models 2BBL Black 8L Turbo All 4BBL 8L All Models 2BBL Gray 8L All Models 2BBL Black 8L All Models 2BBL Black	ERAL MOTORS ER		

1631201, 3634807

(TBI)

1988-85 4.1L All Models


G1667

^{*}RETAIN ORIGINAL CONNECTOR FROM REMOVED GASKET & SPLICE TO NEW GASKET



E.F.E. HEATER GASKETS							
O.E.M INTERCHANGE							
O.E.M. NUMBER	WALKER NUMBER	O.E.M. NUMBER	WALKER NUMBER				
GENERAL 1631201 3634807 10159600 10174801 10174802 10174803 14018761 14032308 14033194 14059353 14059350 14072739 14072740			G1670 G1651 G1651 G1651 G1651 G1668 G1668 G1654 G1670				



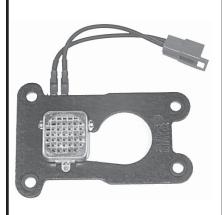

G1308
Replaces O.E. 10174801,
10174802, 10174803,
14033194, 14059353, 14059380



G1656Replaces O.E. 14072739, 14072740




G1667 Replaces O.E. 1631201, 3634807



G1651Replaces O.E. 24501659, 24501660, 25515853, 25516908



G1659Replaces O.E. 14018761

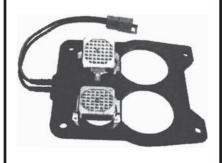

G1668
Replaces O.E. 25518521,
25522511 (Retain original connector from removed gasket & splice to new gasket)



G1654 Replaces O.E. 24501661, 25526373



G1660 Replaces O.E. 10159600, 14032308



G1670 Replaces O.E. 24500047, 25507722, 25536252