

ThunderCore™

NEW PRODUCT ANNOUNCEMENT

COP Boots and Boot Sets


- Original Equipment Replacement
- Premium High Temperature Silicone
- OE Fit, Form, and Function
- Domestic • Asian • European

129 NEW SKUs




900-P2070

VIO 4,536,350 • Model 2007-2016
Ford, Lincoln, Mazda, Mercury

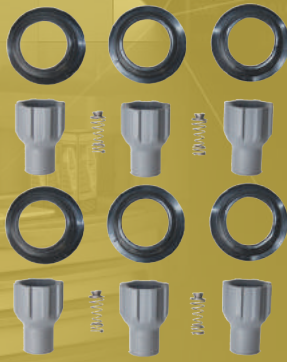

900-P2078

VIO 3,525,384 • Model 2007-2015
Buick, Cadillac, Chevrolet, GMC,
Pontiac, Saturn, Suzuki

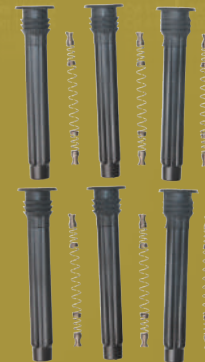

900-P2085

VIO 3,500,273 • Model 2011-2016
Chrysler, Dodge, Jeep, Ram



WALKER PRODUCTS INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069

U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211

Customer Service: 636-257-1700 • Technical Support: 844-252-0114

U.K. Sales Office and Distribution Center: 44(0)121 459 8006

saleseurope@walkerproducts.com • www.walkerproducts.com

YOUR FIRST CHOICE IN QUALITY PRODUCTS



Walker
walkerproducts.com

BUYER'S GUIDE



900-P2039

WIRE SET BOOT

UPC: 724620107016

2.625' X 2.813' X 5.125', 0.088lbs

VIO 117,885

Models: 2001-2009
Subaru



900-P2068

WIRE SET BOOT

UPC: 724620107030

2.625' X 2.813' X 5.125', 0.075lbs

VIO 924,402

Models: 2006-2011
Chrysler, Dodge, Mitsubishi, Volkswagen



900-P2069

WIRE SET BOOT

UPC: 724620107047

2.625' X 2.813' X 5.125', 0.13lbs

VIO 1,459,040

Models: 2006-2014
Ford, Mazda, Mercury



900-P2070

WIRE SET BOOT

UPC: 724620107054

2.625' X 2.813' X 5.125', 0.076lbs

VIO 4,536,350

Models: 2007-2016
Ford, Lincoln, Mazda, Mercury



900-P2071

WIRE SET BOOT

UPC: 724620107061

2.625' X 2.813' X 5.125', 0.107lbs

VIO 3,416,448

Models: 2006-2015
Buick, Chevrolet, GMC, Pontiac, Saturn



900-P2073

WIRE SET BOOT

UPC: 724620107085

2.625' X 2.813' X 5.125', 0.095lbs

VIO 16,246

Models: 1995-1997
Jaguar



900-P2074

WIRE SET BOOT

UPC: 724620107092

2.625' X 2.813' X 5.125', 0.135lbs

VIO 64,818

Models: 2005-2011
Chevrolet, Saab, Saturn



900-P2076

WIRE SET BOOT

UPC: 724620107115

2.625' X 2.813' X 5.125', 0.107lbs

VIO 112,253

Models: 2008-2011
Chevrolet, Saturn



900-P2077

WIRE SET BOOT

UPC: 724620107122

2.625' X 2.813' X 5.125', 0.086lbs

VIO 42,024

Models: 1999-2004
Cadillac



900-P2078

WIRE SET BOOT

UPC: 724620107139

2.625' X 2.813' X 5.125', 0.078lbs

VIO 3,525,384

Models: 2007-2015
Buick, Cadillac, Chevrolet, GMC, Pontiac, Saturn, Suzuki



900-P2079

WIRE SET BOOT

UPC: 724620107146

2.625' X 2.813' X 5.125', 0.149lbs

VIO 2,914,423

Models: 2009-2015
Ford, Lincoln, Mazda, Mercury



900-P2080

WIRE SET BOOT

UPC: 724620105746

2.625' X 2.813' X 5.125', 0.072lbs

VIO 1,988,758

Models: 2007-2016
Chrysler, Dodge, Jeep



900-P2083

WIRE SET BOOT

UPC: 724620107160

2.625' X 2.813' X 5.125', 0.095lbs

VIO 53,279

Models: 1997-2003
Jaguar



900-P2085

WIRE SET BOOT

UPC: 724620107184

2.625' X 2.813' X 5.125', 0.134lbs

VIO 3,500,273

Models: 2011-2016
Chrysler, Dodge, Jeep, Ram



Walker
walkerproducts.com

BUYER'S GUIDE

900-P2087

WIRE SET BOOT



UPC: 724620107207

2.625' X 2.813' X 5.125', 0.086lbs

VIO 541,945

Models: 2004-2009

Buick, Cadillac, Chevrolet, GMC, Saab,
Saturn

900-P2088

WIRE SET BOOT



UPC: 724620107214

2.625' X 2.813' X 5.125', 0.182lbs

VIO 2,874

Models: 1993-1994

Infiniti

900-P2089

WIRE SET BOOT



UPC: 724620107221

2.625' X 2.813' X 5.125', 0.093lbs

VIO 5,403

Models: 2007-2007

Kia

900-P2090

WIRE SET BOOT



UPC: 724620107238

2.625' X 2.813' X 5.125', 0.1lbs

VIO 147,328

Models: 2007-2010

Hyundai, Kia

900-P2094

WIRE SET BOOT



UPC: 724620107276

2.625' X 2.813' X 5.125', 0.082lbs

VIO 2,369,914

Models: 2007-2015

Lexus, Toyota

900-P2095

WIRE SET BOOT



UPC: 724620107283

2.625' X 2.813' X 5.125', 0.146lbs

VIO 35,278

Models: 1998-2000

Lexus

900-P2097

WIRE SET BOOT



UPC: 724620107306

2.625' X 2.813' X 5.125', 0.138lbs

VIO 106,652

Models: 2008-2013

Mazda

900-P2098

WIRE SET BOOT



UPC: 724620107313

2.625' X 2.813' X 5.125', 0.108lbs

VIO 2,490,977

Models: 2007-2014

Nissan, Suzuki

900-P2099

WIRE SET BOOT



UPC: 724620107320

3' X 4.125' X 9', 0.228lbs

VIO 5,621

Models: 1994-1997

Infiniti

900-P2100

WIRE SET BOOT



UPC: 724620107337

2.625' X 2.813' X 5.125', 0.08lbs

VIO 13,430

Models: 1990-1994

Nissan

900-P2101

WIRE SET BOOT



UPC: 724620107344

2.625' X 2.813' X 5.125', 0.094lbs

VIO 1,026,550

Models: 2004-2014

Saab, Subaru

900-P2102

WIRE SET BOOT



UPC: 724620107351

2.625' X 2.813' X 5.125', 0.141lbs

VIO 24,852

Models: 2006-2007

Mazda

900-P2103

WIRE SET BOOT



UPC: 724620107368

2.625' X 2.813' X 5.125', 0.132lbs

VIO 50,145

Models: 2007-2009

Suzuki

900-P2104

WIRE SET BOOT



UPC: 724620107375

2.625' X 2.813' X 5.125', 0.113lbs

VIO 241,492

Models: 2007-2013

Mercedes-Benz



Walker
walkerproducts.com

BUYER'S GUIDE



900-P2105

WIRE SET BOOT

UPC: 724620107382

3' X 4.125' X 9', 0.246lbs

VIO 1,816

Models: 1996-2002
Mercedes-Benz



900-P2106

WIRE SET BOOT

UPC: 724620107399

2.625' X 2.813' X 5.125', 0.107lbs

VIO 116,502

Models: 2011-2013
Nissan



900-P2107

WIRE SET BOOT

UPC: 724620107405

2.625' X 2.813' X 5.125', 0.077lbs

VIO 309,976

Models: 2006-2011
Hyundai, Kia



900-P2108

WIRE SET BOOT

UPC: 724620107412

2.625' X 2.813' X 5.125', 0.099lbs

VIO 29,817

Models: 2003-2005
Subaru



900-P2109

WIRE SET BOOT

UPC: 724620109683

2.625' X 2.813' X 5.125', 0.23lbs

VIO 51,362

Models: 2009-2012
Suzuki



900-P2002-6

BOOT SET

UPC: 724620108525

3' X 4.125' X 9', 2.674lbs

VIO 176,915

Models: 1996-2004
Honda, Isuzu



900-P2003-6

BOOT SET

UPC: 724620108532

3' X 4.125' X 9', 2.758lbs

VIO 48,773

Models: 1994-1995
Toyota



900-P2005-6

BOOT SET

UPC: 724620108556

2.625' X 2.813' X 5.125', 2.333lbs

VIO 448,949

Models: 1991-2005
BMW



900-P2005-8

BOOT SET

UPC: 724620108563

2.625' X 2.813' X 5.125', 3.096lbs

VIO 107,883

Models: 1993-2003
BMW



900-P2006-4

BOOT SET

UPC: 724620144653

3' X 4.125' X 9', 2.022lbs

VIO 100,263

Models: 2004-2010
Mitsubishi



900-P2011-4

BOOT SET

UPC: 724620113246

2.625' X 2.813' X 5.125', 1.822lbs

VIO 24,173

Models: 1997-2000
Audi, Volkswagen



900-P2011-6

BOOT SET

UPC: 724620108624

2.625' X 2.813' X 5.125', 2.711lbs

VIO 23,889

Models: 2000-2002
Audi



900-P2017-6

BOOT SET

UPC: 724620108679

2.625' X 2.813' X 5.125', 2.729lbs

VIO 59,034

Models: 2001-2001
Infiniti, Nissan



900-P2020-5

BOOT SET

UPC: 724620113253

3' X 4.125' X 9', 2.183lbs

VIO 118,550

Models: 2004-2007
Volvo



Walker
walkerproducts.com

BUYER'S GUIDE



900-P2020-6

BOOT SET

UPC: 724620108709

3' X 4.125' X 9', 2.602lbs

VIO 49,743

Models: 2000-2005

Volvo



900-P2021-5

BOOT SET

UPC: 724620108716

2.625' X 2.813' X 5.125', 2.197lbs

VIO 1,302

Models: 1992-1997

Audi



900-P2023-6

BOOT SET

UPC: 724620132933

2.625' X 2.813' X 5.125', 3.03lbs

VIO 3,933

Models: 1995-2002

Mazda



900-P2025-8

BOOT SET

UPC: 724620108754

3' X 4.125' X 9', 3.454lbs

VIO 1,619

Models: 1997-1999

Audi



900-P2027-6

BOOT SET

UPC: 724620108778

2.625' X 2.813' X 5.125', 2.639lbs

VIO 53,737

Models: 2002-2008

Porsche



900-P2028-6

BOOT SET

UPC: 724620108785

2.625' X 2.813' X 5.125', 2.759lbs

VIO 85,230

Models: 1997-2008

Porsche



900-P2030-8

BOOT SET

UPC: 724620108815

3' X 4.125' X 9', 3.554lbs

VIO 548,465

Models: 1997-2015

Ford, Lincoln, Mercury



900-P2031-6

BOOT SET

UPC: 724620108822

3' X 4.125' X 9', 3.55lbs

VIO 832,222

Models: 1998-2006

Chrysler, Dodge, Plymouth



900-P2032-4

BOOT SET

UPC: 724620108839

2.625' X 2.813' X 5.125', 3.406lbs

VIO 164,136

Models: 1987-2002

Buick, Chevrolet, Oldsmobile, Pontiac



900-P2032-6

BOOT SET

UPC: 724620132940

2.625' X 2.813' X 5.125', 0.045lbs

VIO 25,035

Models: 2002-2004

Oldsmobile



900-P2035-8

BOOT SET

UPC: 724620108853

3' X 4.125' X 9', 2.592lbs

VIO 1,834,840

Models: 2005-2015

Chrysler, Dodge, Jeep, Ram



900-P2036-6

BOOT SET

UPC: 724620108860

2.625' X 2.813' X 5.125', 1.763lbs

VIO 1,076,637

Models: 1999-2006

Jeep



900-P2037-4

BOOT SET

UPC: 724620108877

2.625' X 2.813' X 5.125', 1.19lbs

VIO 821,604

Models: 2001-2007

Chevrolet, Pontiac, Saturn



900-P2038-4

BOOT SET

UPC: 724620108884

2.625' X 2.813' X 5.125', 1.55lbs

VIO 97,604

Models: 2004-2008

Chevrolet, GMC, Isuzu



Walker
walkerproducts.com

BUYER'S GUIDE



900-P2038-5 BOOT SET

UPC: 724620108891

2.625' X 2.813' X 5.125', 1.927lbs

VIO 304,264 Models: 2004-2007

Chevrolet, GMC, Hummer, Isuzu



900-P2038-6 BOOT SET

UPC: 724620108907

3' X 4.125' X 9', 2.35lbs

VIO 1,082,662 Models: 2002-2005

Buick, Chevrolet, GMC, Isuzu



900-P2039-6 BOOT SET

UPC: 724620108914

2.625' X 2.813' X 5.125', 0.303lbs

VIO 117,885 Models: 2001-2009

Subaru



900-P2040-8 BOOT SET

UPC: 724620108921

2.625' X 2.813' X 5.125', 3.142lbs

VIO 229,822 Models: 2000-2003

Cadillac, Oldsmobile



900-P2041-4 BOOT SET

UPC: 724620108938

2.625' X 2.813' X 5.125', 1.458lbs

VIO 1,458,054 Models: 2003-2013

Ford, Mazda, Mercury



900-P2042-6 BOOT SET

UPC: 724620108945

3' X 4.125' X 9', 2.296lbs

VIO 1,487,691 Models: 2000-2009

Ford, Mazda, Mercury



900-P2043-6 BOOT SET

UPC: 724620108952

2.625' X 2.813' X 5.125', 3.779lbs

VIO 52,938 Models: 2000-2005

Jaguar, Lincoln



900-P2044-8 BOOT SET

UPC: 724620108969

2.625' X 2.813' X 5.125', 4.824lbs

VIO 148,093 Models: 1999-2009

Ford, Jaguar, Lincoln



900-P2047-6 BOOT SET

UPC: 724620109003

2.625' X 2.813' X 5.125', 3.629lbs

VIO 25,105 Models: 1994-2000

BMW



900-P2048-4 BOOT SET

UPC: 724620109010

3' X 4.125' X 9', 1.657lbs

VIO 1,508,284 Models: 2002-2010

Nissan



900-P2049-6 BOOT SET

UPC: 724620109027

3' X 4.125' X 9', 3.358lbs

VIO 2,456,046 Models: 2001-2014

Infiniti, Nissan



900-P2049-8 BOOT SET

UPC: 724620132957

2.625' X 2.813' X 5.125', 4.446lbs

VIO 197,313 Models: 2004-2006

Nissan



900-P2050-4 BOOT SET

UPC: 724620109034

3' X 4.125' X 9', 2.005lbs

VIO 282,749 Models: 2002-2006

Nissan



900-P2052-4 BOOT SET

UPC: 724620109065

2.625' X 2.813' X 5.125', 2.058lbs

VIO 103,674 Models: 1999-2007

Chevrolet, Suzuki



Walker
walkerproducts.com

BUYER'S GUIDE



900-P2052-6

BOOT SET

UPC: 724620109072

2.625' X 2.813' X 5.125', 3.065lbs

VIO 132,195

Models: 1999-2006

Chevrolet, Suzuki



900-P2053-6

BOOT SET

UPC: 724620109089

2.625' X 2.813' X 5.125', 2.951lbs

VIO 7,666

Models: 2004-2006

Suzuki



900-P2054-5

BOOT SET

UPC: 724620109096

3' X 4.125' X 9', 2.563lbs

VIO 215,494

Models: 1999-2007

Volvo



900-P2057-6

BOOT SET

UPC: 724620109126

2.625' X 2.813' X 5.125', 3.155lbs

VIO 786,368

Models: 2006-2013

Dodge, Mercedes-Benz



900-P2058-4

BOOT SET

UPC: 724620109133

2.625' X 2.813' X 5.125', 2.262lbs

VIO 125,953

Models: 2003-2013

Mercedes-Benz



900-P2059-6

BOOT SET

UPC: 724620132964

2.625' X 2.813' X 5.125', 2.969lbs

VIO 29,182

Models: 2009-2013

Porsche



900-P2059-8

BOOT SET

UPC: 724620109140

2.625' X 2.813' X 5.125', 3.944lbs

VIO 54,719

Models: 2003-2014

Porsche



900-P2060-4

BOOT SET

UPC: 724620109157

2.625' X 2.813' X 5.125', 2.19lbs

VIO 20,223

Models: 2001-2004

Mercedes-Benz



900-P2062-6

BOOT SET

UPC: 724620109171

2.625' X 2.813' X 5.125', 2.333lbs

VIO 869,939

Models: 2006-2012

Ford, Lincoln, Mazda, Mercury



900-P2063-6

BOOT SET

UPC: 724620109188

2.625' X 2.813' X 5.125', 1.775lbs

VIO 59,910

Models: 1999-2002

Oldsmobile



900-P2064-6

BOOT SET

UPC: 724620109195

2.625' X 2.813' X 5.125', 1.793lbs

VIO 81,044

Models: 2004-2008

Mitsubishi



900-P2067-6

BOOT SET

UPC: 724620132971

2.625' X 2.813' X 5.125', 1.493lbs

VIO 5,574

Models: 1993-1998

Toyota



900-P2068-6

BOOT SET

UPC: 724620109232

2.625' X 2.813' X 5.125', 0.23lbs

VIO 924,402

Models: 2006-2011

Chrysler, Dodge, Mitsubishi, Volkswagen



900-P2069-4

BOOT SET

UPC: 724620109249

2.625' X 2.813' X 5.125', 0.23lbs

VIO 1,459,040

Models: 2006-2014

Ford, Mazda, Mercury



Walker
walkerproducts.com

BUYER'S GUIDE



900-P2070-6

BOOT SET

UPC: 724620109256

2.625' X 2.813' X 5.125', 0.23lbs

VIO 4,551,251

Models: 2007-2016

Ford, Lincoln, Mazda, Mercury



900-P2071-4

BOOT SET

UPC: 724620109263

2.625' X 2.813' X 5.125', 0.23lbs

VIO 3,177,623

Models: 2006-2015

Buick, Chevrolet, GMC, Pontiac, Saturn



900-P2071-6

BOOT SET

UPC: 724620132988

2.625' X 2.813' X 5.125', 0.418lbs

VIO 68,175

Models: 2015-2015

Chevrolet, GMC



900-P2072-8

BOOT SET

UPC: 724620109287

3' X 4.125' X 9', 0.814lbs

VIO 1,396,223

Models: 2008-2014

Ford, Lincoln, Mercury



900-P2073-6

BOOT SET

UPC: 724620109294

2.625' X 2.813' X 5.125', 0.23lbs

VIO 16,246

Models: 1995-1997

Jaguar



900-P2074-4

BOOT SET

UPC: 724620109300

2.625' X 2.813' X 5.125', 0.23lbs

VIO 64,818

Models: 2005-2011

Chevrolet, Saab, Saturn



900-P2075-4

BOOT SET

UPC: 724620109317

3' X 4.125' X 9', 0.277lbs

VIO 117,871

Models: 2007-2012

Chevrolet, GMC



900-P2075-5

BOOT SET

UPC: 724620109324

3' X 4.125' X 9', 0.486lbs

VIO 244,495

Models: 2007-2012

Chevrolet, GMC, Hummer, Isuzu



900-P2075-6

BOOT SET

UPC: 724620109331

3' X 4.125' X 9', 0.565lbs

VIO 497,718

Models: 2006-2009

Buick, Chevrolet, GMC, Isuzu, Saab



900-P2076-4

BOOT SET

UPC: 724620109348

2.625' X 2.813' X 5.125', 0.23lbs

VIO 112,253

Models: 2008-2011

Chevrolet, Saturn



900-P2077-6

BOOT SET

UPC: 724620109355

2.625' X 2.813' X 5.125', 0.23lbs

VIO 42,024

Models: 1999-2004

Cadillac



900-P2078-6

BOOT SET

UPC: 724620109362

2.625' X 2.813' X 5.125', 0.23lbs

VIO 3,455,852

Models: 2007-2015

Buick, Cadillac, Chevrolet, GMC, Pontiac, Saab, Saturn, Suzuki



900-P2079-4

BOOT SET

UPC: 724620109379

2.625' X 2.813' X 5.125', 0.23lbs

VIO 3,019,294

Models: 2009-2016

Ford, Lincoln, Mazda, Mercury



900-P2080-4

BOOT SET

UPC: 724620109386

2.625' X 2.813' X 5.125', 0.23lbs

VIO 1,988,758

Models: 2007-2016

Chrysler, Dodge, Jeep



Walker
walkerproducts.com

BUYER'S GUIDE



900-P2082-4

BOOT SET

UPC: 724620109393

3' X 4.125' X 9', 0.354lbs

VIO 285,652

Models: 2007-2013

Nissan



900-P2083-8

BOOT SET

UPC: 724620109409

3' X 4.125' X 9', 0.491lbs

VIO 53,279

Models: 1997-2003

Jaguar



900-P2085-6

BOOT SET

UPC: 724620109423

3' X 4.125' X 9', 0.277lbs

VIO 3,500,273

Models: 2011-2016

Chrysler, Dodge, Jeep, Ram



900-P2086-6

BOOT SET

UPC: 724620109430

3' X 4.125' X 9', 0.619lbs

VIO 38,784

Models: 2006-2008

Suzuki



900-P2087-6

BOOT SET

UPC: 724620109447

2.625' X 2.813' X 5.125', 0.23lbs

VIO 541,945

Models: 2004-2009

Buick, Cadillac, Chevrolet, GMC, Saab, Saturn



900-P2088-6

BOOT SET

UPC: 724620109454

3' X 4.125' X 9', 0.277lbs

VIO 2,874

Models: 1993-1994

Infiniti



900-P2089-6

BOOT SET

UPC: 724620109461

2.625' X 2.813' X 5.125', 0.335lbs

VIO 16,158

Models: 2006-2007

Kia



900-P2090-6

BOOT SET

UPC: 724620109478

2.625' X 2.813' X 5.125', 0.23lbs

VIO 147,328

Models: 2007-2010

Hyundai, Kia



900-P2091-8

BOOT SET

UPC: 724620109485

3' X 4.125' X 9', 0.277lbs

VIO 4,848

Models: 2009-2013

Infiniti



900-P2094-6

BOOT SET

UPC: 724620109515

2.625' X 2.813' X 5.125', 0.271lbs

VIO 2,415,663

Models: 2007-2015

Lexus, Toyota



900-P2095-8

BOOT SET

UPC: 724620109522

3' X 4.125' X 9', 0.653lbs

VIO 35,278

Models: 1998-2000

Lexus



900-P2096-4

BOOT SET

UPC: 724620109539

2.625' X 2.813' X 5.125', 0.163lbs

VIO 3,246,329

Models: 2004-2014

Lexus, Scion, Toyota



900-P2096-6

BOOT SET

UPC: 724620109546

2.625' X 2.813' X 5.125', 0.222lbs

VIO 699,512

Models: 2006-2016

Lexus, Toyota



900-P2096-8

BOOT SET

UPC: 724620109553

2.625' X 2.813' X 5.125', 0.281lbs

VIO 2,426,532

Models: 1998-2016

Lexus, Toyota



Walker
walkerproducts.com

BUYER'S GUIDE



900-P2097-4

BOOT SET

UPC: 724620109560

2.625' X 2.813' X 5.125', 0.418lbs

VIO 106,652

Models: 2008-2013
Mazda



900-P2098-4

BOOT SET

UPC: 724620109577

3' X 4.125' X 9', 0.345lbs

VIO 2,075,243

Models: 2007-2014
Nissan, Suzuki



900-P2098-6

BOOT SET

UPC: 724620132995

3' X 4.125' X 9', 0.472lbs

VIO 125,567

Models: 2007-2013
Nissan, Suzuki



900-P2099-6

BOOT SET

UPC: 724620109584

3' X 4.125' X 9', 0.277lbs

VIO 5,621

Models: 1994-1997
Infiniti



900-P2100-6

BOOT SET

UPC: 724620133008

2.625' X 2.813' X 5.125', 0.257lbs

VIO 8,420

Models: 1992-1994
Nissan



900-P2101-4

BOOT SET

UPC: 724620109607

2.625' X 2.813' X 5.125', 3.206lbs

VIO 991,009

Models: 2004-2014
Saab, Subaru



900-P2102-4

BOOT SET

UPC: 724620109614

3' X 4.125' X 9', 0.478lbs

VIO 24,852

Models: 2006-2007
Mazda



900-P2103-4

BOOT SET

UPC: 724620109621

3' X 4.125' X 9', 0.442lbs

VIO 50,145

Models: 2007-2009
Suzuki



900-P2104-8

BOOT SET

UPC: 724620109638

3' X 4.125' X 9', 0.635lbs

VIO 241,492

Models: 2007-2013
Mercedes-Benz



900-P2106-4

BOOT SET

UPC: 724620109652

2.625' X 2.813' X 5.125', 0.296lbs

VIO 116,502

Models: 2011-2013
Nissan



900-P2107-4

BOOT SET

UPC: 724620109669

2.625' X 2.813' X 5.125', 0.23lbs

VIO 309,976

Models: 2006-2011
Hyundai, Kia



900-P2108-4

BOOT SET

UPC: 724620109676

2.625' X 2.813' X 5.125', 0.261lbs

VIO 29,817

Models: 2003-2005
Subaru



900-P2109-4

BOOT SET

UPC: 724620109690

2.625' X 2.813' X 5.125', 0.23lbs

VIO 23,779

Models: 2009-2012
Suzuki



900-P2029-10

BOOT SET

UPC: 724620108792

3' X 4.125' X 9', 4.205lbs

VIO 329,350

Models: 1997-2014
Ford



Walker
walkerproducts.com

BUYER'S GUIDE



900-P2045-10

BOOT SET

UPC: 724620108976

2.625' X 2.813' X 5.125', 8.185lbs

VIO 40,382

Models: 2005-2008

Ford



900-P2072-10

BOOT SET

UPC: 724620109270

3' X 4.125' X 9', 0.277lbs

VIO 26,447

Models: 2008-2015

Ford



900-P2105-12

BOOT SET

UPC: 724620109645

3' X 4.125' X 9', 2.508lbs

VIO 1,816

Models: 1996-2002

Mercedes-Benz